

Remote Console Access

1. In the NetSHIELD GUI go to System – Utilities and select Enable SSH
2. Use PuTTY or a similar program to access console_user@<ip address>. Use the IP address of the NetSHIELD appliance.
3. The default password is ‘changeme’ Use the ‘changeme’ password unless it has been updated.
4. If this is the first remote console login you will be asked to change the password.
5. It will also ask to set a new password – you can reuse ‘changeme’ if you like.